


Your Partner in Patient Safety

#### PRODUCT DATASHEET

# KG250/251 Grab Rail

The WC Grab Rail is a 600mm handrail section with either a closed or open end cap. It is suitable for use either as a vertical rail beside a mirror, on the wall behind the WC, at 15° beside the WC or on the back of the door. Finished in a range of powder coating options and supplied with security fixings.

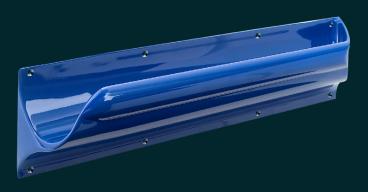



### Terms and conditions:

To see our full terms and conditions, please visit: kingswaygroupglobal.com/terms

# Installation Description

- Place the Grab Rail on the wall and mark out the 10 fixing points
- Drill holes for the 10 fixing points and insert suitable plugs
- Fix the Drop Rail in place using the security screws provided

We recommend Grab Rails are sealed around all sides with anti-pick mastic.

# Operation and Maintenance

#### Operation

To grip the handrail correctly, the fingers should curl round the bar with the thumb supporting from the outside.

#### **Maintenance**

Designed to be maintenance free having either a powder coated or anodised finish.

### Cleaning

Avoid the use of caustic cleaners. Where necessary, only a light detergent should be used.

## Guarantee

# 5 Year Guarantee\*

\*For faulty manufacture and not for damage

#### **Specification**

KG250 Anti-ligature DDA 600mm Left Hand Grab Rail. KG251 Anti-ligature DDA 600mm Right Hand Grab Rail.


This product is patented as per GB2505494




## PRODUCT DIAGRAM


# KG250/251 Grab Rail


KG251 Right Hand Grab Bar




## KG250 Left Hand Grab Bar














#### Terms and conditions:

To see our full terms and conditions, please visit: kingswaygroupglobal.com/terms