

## PRODUCT DATASHEET

# KG07 Manual Liquid Soap Dispenser, Refillable

A stainless steel, surface-mounted liquid soap dispenser that provides a hygienic, safe, and durable solution to hand sanitisation in patient accessible washrooms. The manually operated unit features a shaped top and smooth edges for use in the most challenging environments. The dispenser is provided with a refillable dispensing bottle which can be removed to manage refills.



### Terms and conditions:

To see our full terms and conditions, please visit:  
[kingswaygroupglobal.com/en-us/terms](https://kingswaygroupglobal.com/en-us/terms)

## Installation Description

- Place the dispenser on the wall and mark out the screw hole locations, making sure to allow room for the inner cassette to be lowered for refilling
- Drill holes for the provided screws and insert suitable anchors
- Secure the dispenser to the wall using the security screws provided

We recommend that you apply pick-resistant security sealant around the perimeter of the dispenser.

## Operation and Maintenance

### Operation

To refill, unlock while supporting the inner cassette then slide the cassette downwards. Remove the soap reservoir and fill with liquid soap. Put the soap reservoir back in place and raise the inner cassette. Lock the unit and ensure the cassette is secured before use.

### Maintenance

Care should be taken to ensure the lock remains functional and free from signs of damage or tampering and that the security screws remain secure. When necessary, lubricate the lock with a dry graphite lubricant. All Kingsway keyed dispensers use the same key.

### Cleaning

Should be cleaned as part of regular schedule using mild (non-abrasive) detergents. Avoid acidic cleaners.

## Warranty

### 1 Year Manufacturer's Defect Warranty\*


\*For faulty manufacture and not for damage

### Specification

KG07 Manual Liquid Soap Dispenser, Refillable  
This product is refilled manually and requires bulk-type liquid soap/sanitizer containers to be purchased separately. Gel and Foam soap/sanitizer types are not recommended.

PRODUCT DIAGRAM

# KG07 Manual Soap Dispenser

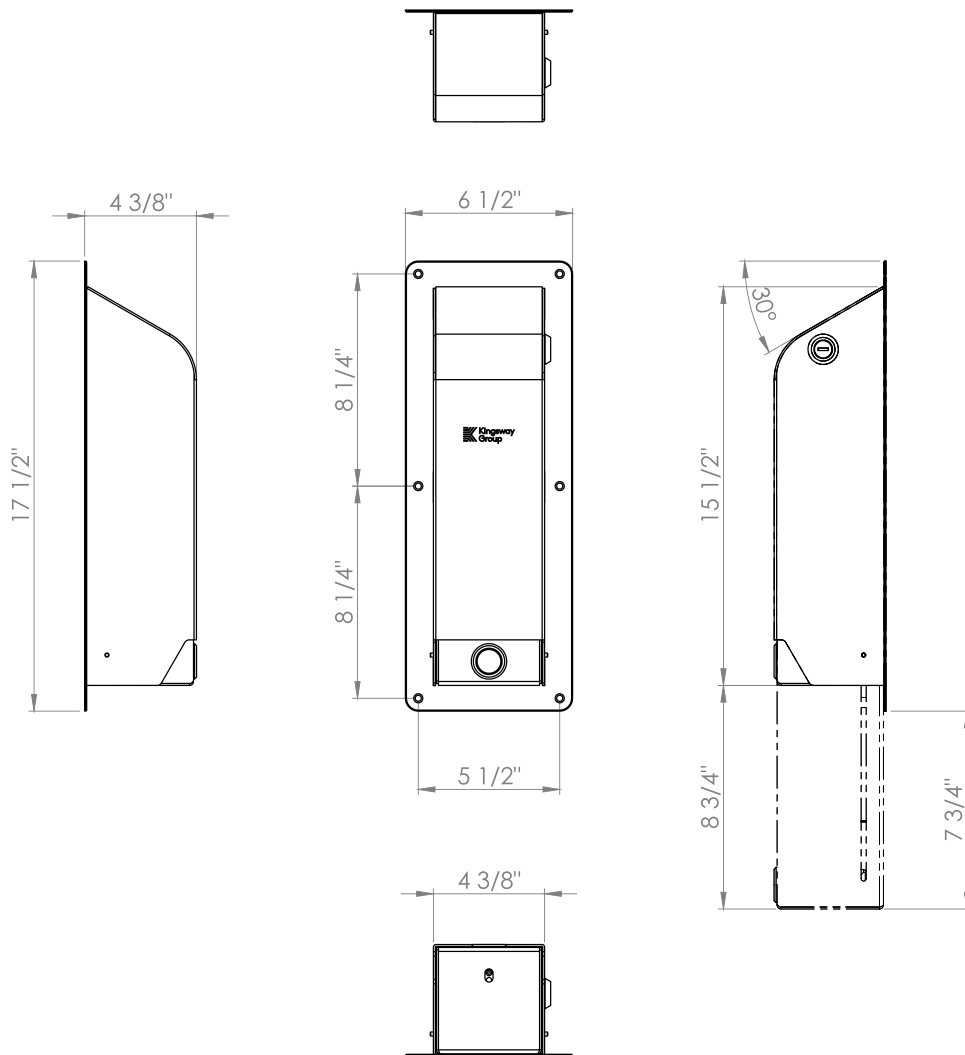

**Terms and conditions:**

To see our full terms and conditions, please visit: [kingswaygroupglobal.com/en-us/terms](https://kingswaygroupglobal.com/en-us/terms)