

## PRODUCT DATASHEET

# KG08 Manual Soap Dispenser, Gojo LTX-12 Compatible

A stainless steel, surface-mounted soap dispenser for use in behavioral health areas, compatible with Gojo LTX series 1200mL/1250mL dispenser refill cartridges. The manually operated dispenser provides a hygienic and ligature-resistant solution to soap dispensing and hand sanitization in high-risk environments. The inner cassette slides downwards when unlocked, to allow replacement of the dispenser refill cartridge.



This product requires Gojo LTX series 1200mL/1250mL dispenser refill cartridges to be purchased separately.

### Terms and conditions:

To see our full terms and conditions, please visit:  
[kingswaygroupglobal.com/en-us/terms](https://kingswaygroupglobal.com/en-us/terms)

## Installation Description

- Place the dispenser on the wall and mark out the screw hole locations, making sure to allow room for the inner cassette to be lowered for refilling
- Drill holes for the provided screws and insert suitable anchors
- Secure the dispenser to the wall using the security screws provided

We recommend that you apply pick-resistant security sealant around the perimeter of the dispenser.

## Operation and Maintenance

### Operation

- To load the dispenser, unlock the unit while supporting the inner cassette then allow the cassette to slide down
- Remove the empty soap cartridge and replace with a new one, ensuring the nozzles are properly aligned and the brackets are properly located
- Slide the inner cassette up into the closed position and lock the unit to secure

### Maintenance

Care should be taken to ensure the lock and nozzle remain functional and free from signs of damage or tampering and that the security screws are secure. When necessary, lubricate the lock with a dry graphite lubricant. All Kingsway keyed dispensers use the same key.

### Cleaning

Should be cleaned as part of regular schedule using mild (non-abrasive) detergents. Avoid acidic cleaners.

## Guarantee

### 3 Year Guarantee\*


\*For faulty manufacture and not for damage

### Specification

KG08 Manual Soap Dispenser, Gojo LTX-12 Compatible

PRODUCT DIAGRAM

# KG08 Manual Soap Dispenser Gojo Compatible

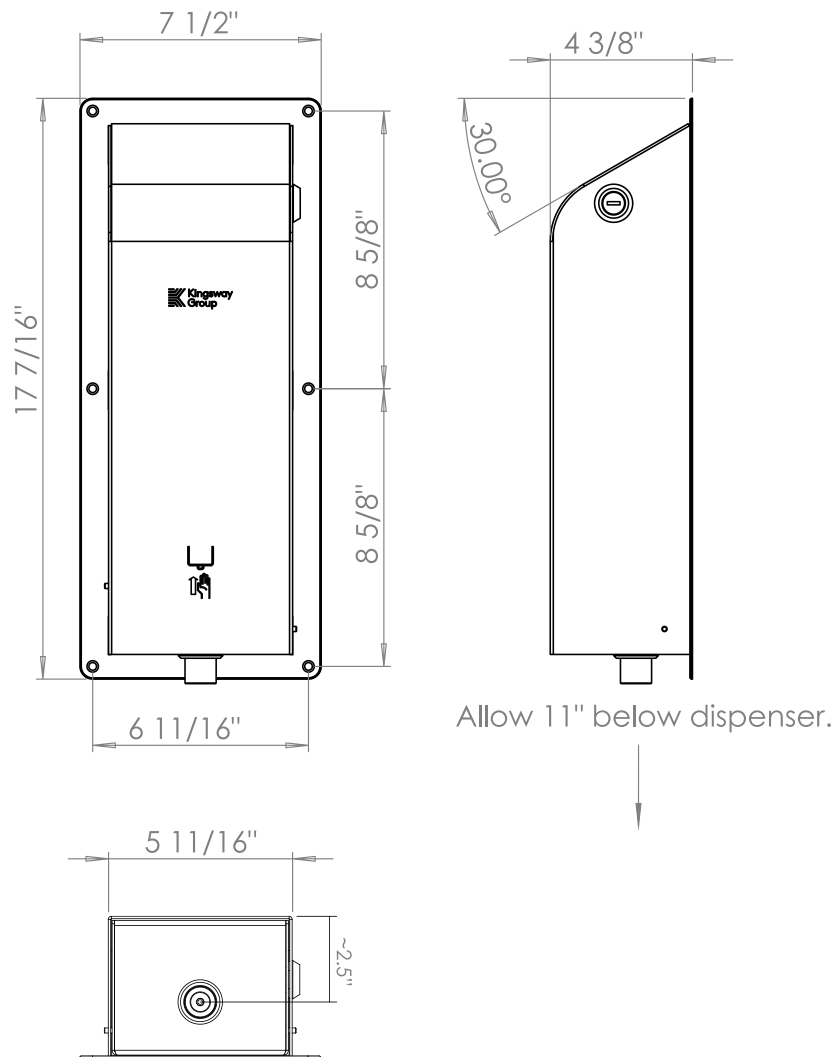

**Terms and conditions:**

To see our full terms and conditions, please visit: [kingswaygroupglobal.com/en-us/terms](https://kingswaygroupglobal.com/en-us/terms)

PRODUCT REFILL

## KG08 Product Refill List

The KG08 is compatible with GOJO's LTX-1200 Foam Refill Cartridges. This includes the GOJO, PURELL, and PROVON brands.

### Sinks and Washrooms - Hand Soap

[1911-04](#) - GOJO Clear & Mild Foam Handwash

[1912-02](#) - GOJO Antibacterial Plum Foam Handwash

[1916-02](#) - GOJO Pomeberry Foam Handwash

[1922-02](#) - PROVON Antimicrobial Foam Handwash With 2% CHG

[1940-02](#) - GOJO Antimicrobial Foam Handwash With PCMX

[1941-02](#) - PROVON Clear & Mild Foam Handwash

[1944-02](#) - PROVON Foaming Antimicrobial Handwash With PCMX

### Corridors and General Areas - Hand Sanitizer

[1902-02](#) - PURELL SF607 Hand Sanitizer Foam

[1904-02](#) - PURELL Advanced Hand Sanitizer Green Certified Foam

[1905-02](#) - PURELL Advanced Hand Sanitizer Foam

#### Terms and conditions:

To see our full terms and conditions, please visit:  
[kingswaygroupglobal.com/en-us/terms](https://kingswaygroupglobal.com/en-us/terms)

