

## PRODUCT DATASHEET

# KG10 Recessed Toilet Tissue Dispenser

A stainless steel, recessed toilet tissue dispenser that provides the ultimate solution for ligature-resistant washrooms. Flush fitting and well styled, the KG10 delivers the perfect combination of safety and aesthetics when creating non-institutional interiors in behavioral health care environments.



### Terms and conditions:

To see our full terms and conditions, please visit:  
[kingswaygroupglobal.com/en-us/terms](https://kingswaygroupglobal.com/en-us/terms)

## Installation Description

- Mark out and remove the cutout needed for the recess of the dispenser body
- Place the dispenser into the cut-out and mark out the screw hole locations on the wall
- Drill holes for the provided screws and insert suitable anchors
- Secure the dispenser into the recess using the security screws provided

We recommend that you apply pick-resistant security sealant around the perimeter of the dispenser.

## Operation and Maintenance

### Operation

To load the dispenser, unlock the unit and load toilet tissues on to the shelf. Once loaded, close the unit and lock to secure. Compatible toilet tissues to a maximum of 3 3/8" x 4 15/16" when folded.

### Maintenance

Care should be taken to ensure the lock remains functional and free from signs of damage or tampering and that the security screws remain secure. When necessary, lubricate the lock with a dry graphite lubricant. All Kingsway keyed dispensers use the same key.

### Cleaning

Should be cleaned as part of regular schedule using mild (non-abrasive) detergents. Avoid acidic cleaners.

## Warranty

### 1 Year Manufacturer's Defect Warranty\*


\*For faulty manufacture and not for damage

### Specification

KG10 Recessed Toilet Tissue Dispenser

PRODUCT DIAGRAM

# KG10 Recessed Toilet Tissue Dispenser

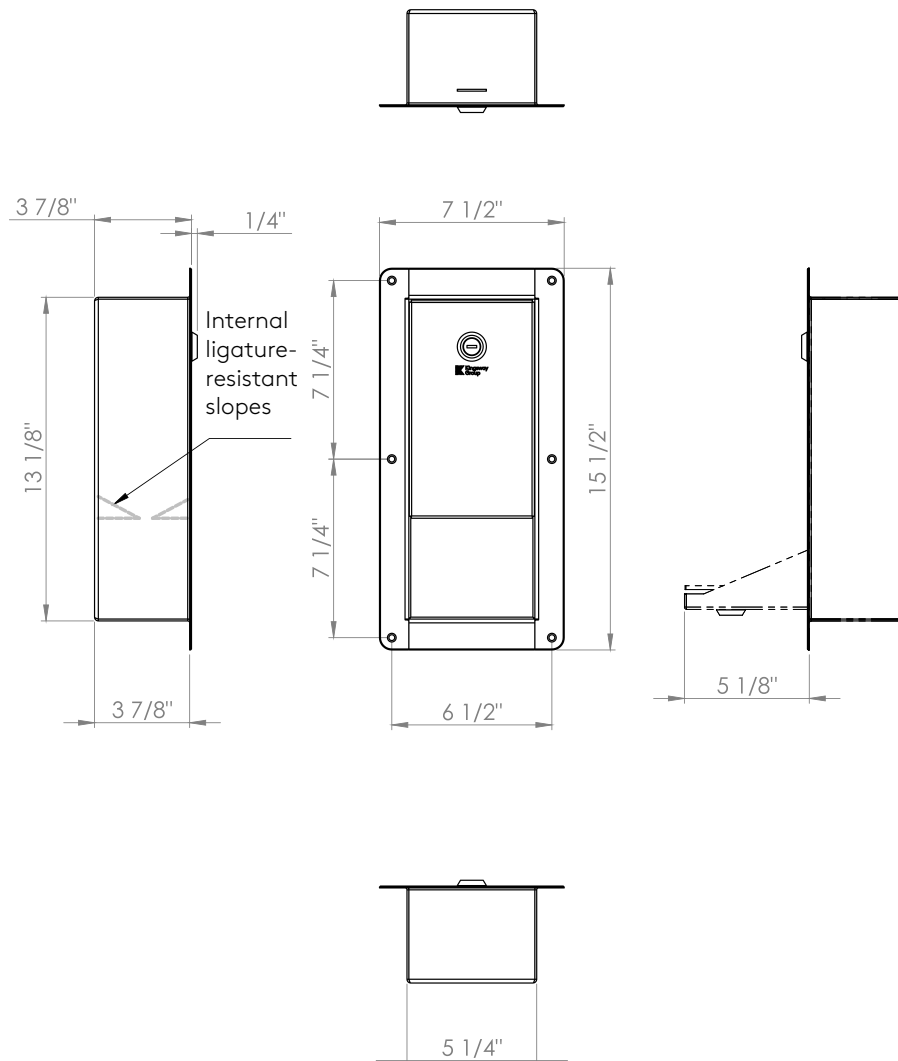

**Terms and conditions:**

To see our full terms and conditions, please visit: [kingswaygroupglobal.com/en-us/terms](https://kingswaygroupglobal.com/en-us/terms)