
# Switch Anti-Barricade Door System



## Product datasheet



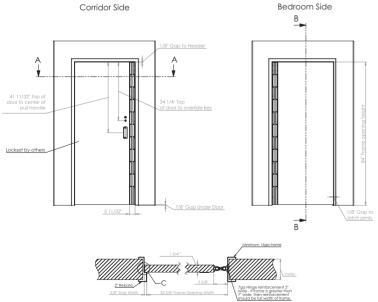

#### Anti-ligature Disclaimer

Anti-ligature Disclaimer The anti-ligature design characteristics of this product are not intended to replace or substitute the need for necessary supervision of those who may be at risk, or for other necessary protective measures to be taken in the specific circumstances of usage. Kingsway Group, Inc. does not offer any products for sale as being 'ligature-free' and will not be liable for any claims arising from ligature attachment on its products. It is the customer's responsibility to ensure that products purchased and installed are suitable for the environments they are installed in.

The Switch anti-barricade door system allows the safe opening of a door outwards in the event of a patient barricade. By unlocking the unique Switch mechanism on the hinge side of the door staff can remain in the safe 'green zone' while resolving a barricade issue. The Switch anti-barricade door system can be used on new door frame or retro fitted into existing single rabbet frame with the use of the head filler section.

#### **Door System Type**

Switch

#### **Door Action**

Double action anti-barricade

#### **Hardware Required**

KG280 Switch antibarricade hinge system

#### Frame Required

Cased header and frame jamb with single rabbeted latching jamb

#### Door thicknesses

1¾" or 2" door

#### **Max Opening Dimensions**

4'0" x 7'0"

#### Rating

UL1784 rated for smoke leakage

#### Guarantee

1 Year

This product is subject to a pending patent application #15977392.

# Switch Anti-Barricade Door System



## Product datasheet

#### **Operation Step-By-Step:**



## Step 1

Staff approach the door and look through the vision panel (if present) to check the patient's location within the room.



### Step 2

Standing safely in the barricade 'green zone' the staff unlock the Switch hinge mechanism using the dedicated Kingsway key.



## Step 3

Staff pull the door outwards using the handle in the door still standing in the safety of the hinge side of the door.



## Step 4

Door retracts outwards – even if the deadbolt is locked it still clears passed the door frame which guarantees entry even when door is locked shut.

#### Anti-ligature Disclaimer

Anti-ligature Disclaimer The anti-ligature design characteristics of this product are not intended to replace or substitute the need for necessary supervision of those who may be at risk, or for other necessary protective measures to be taken in the specific circumstances of usage. Kingsway Group, Inc. does not offer any products for sale as being 'ligature-free' and will not be liable for any claims arising from ligature attachment on its products. It is the customer's responsibility to ensure that products purchased and installed are suitable for the environments they are installed in.