

PRODUCT DATASHEET

KG08 Manual Soap Dispenser Gojo Compatible

A stainless steel, surface-mounted liquid soap dispenser for Gojo soap refills. Soap dispenses from the manually operated unit to provide a hygienic and anti-ligature solution to hand sanitisation. The inner cassette drops downwards when unlocked to allow replacement of the inner refill cartridge.



Terms and conditions:

To see our full terms and conditions, please visit:
kingswaygroupglobal.com/en-au/terms

Your Partner in Patient Safety

Installation Description

- Mark out the location of the dispenser
- Drill and plug holes to a suitable depth
- Secure the dispenser to the wall using the security fixings provided

We recommend that you caulk around all sides with tamper proof security sealant.

Operation and Maintenance

Operation

To refill, unlock the unit and slide the inner cassette downwards. Remove the old soap cartridge and replace with a new one, ensuring that it is properly located. Raise the inner cassette and lock to secure.

Maintenance

Ensure the lock and nozzle remain functional and free from signs of damage or tampering. When necessary, lubricate the lock with a dry graphite lubricant.

Cleaning

Should be cleaned as part of regular schedule using mild (non-abrasive) detergents. Avoid acidic cleaners.

Guarantee

5 Year Guarantee*

*For faulty manufacture and not for damage


Specification

KG08 Manual Soap Dispenser Gojo
Compatible

Soap refills not included – compatible
with GOJO LTX-12 1200ml refill cartridges

PRODUCT DIAGRAM

KG08 Manual Soap Dispenser Gojo Compatible

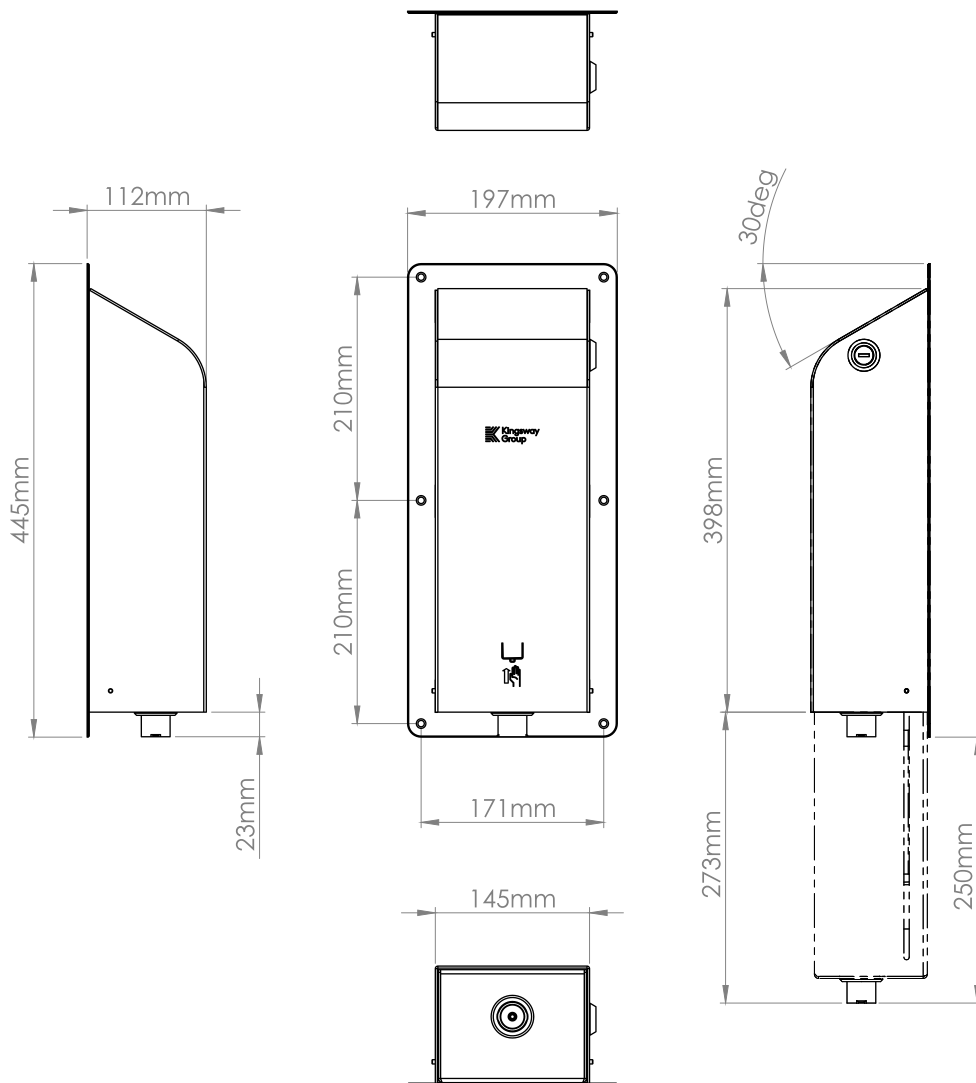

Terms and conditions:

To see our full terms and conditions, please visit: kingswaygroupglobal.com/en-au/terms