

PRODUCT DATASHEET

## KG40 Ergo Grip Pull Handle (on Backplate)

The Ergo Grip is a stylish and modern anti-ligature pull handle that offers excellent grip. It's supplied on a large radiused finger plate with chamfered edges and countersunk fixing holes (supplied with security fixings).



### Terms and conditions:

To see our full terms and conditions, please visit:  
[kingswaygroupglobal.com/en-au/terms](https://kingswaygroupglobal.com/en-au/terms)

# Your Partner in Patient Safety

## Installation Description

- If a Bolt Fixed Handle is being fitted to the other side of the door, install that handle first before continuing
- Mark out the 4 fixing holes by placing the handle on the door, making sure the backplate is flat on the door
- Pilot the 4 fixing holes then fix the handle in place using the 4 countersunk security screws supplied

## Operation and Maintenance

### Operation

The Ergo Grip has been designed to allow fingers and thumb to pull on the 40mm wide front face with a finger clearance area of 20mm from the door face.

### Maintenance

Periodic checks should be made to the fixings to ensure they remain tight and that they have not been tampered with.

### Cleaning

Ergo Grip handles should be cleaned using a non-abrasive sanitising agent. Abrasive cleaning cloth and agents should be avoided.

## Guarantee

### 5 Year Guarantee\*


\*For faulty manufacture and not for damage

### Specification

KG40 Ergo Grip Pull Handle on Backplate

PRODUCT DIAGRAM

# KG40 Ergo Grip Pull Handle (on Backplate)

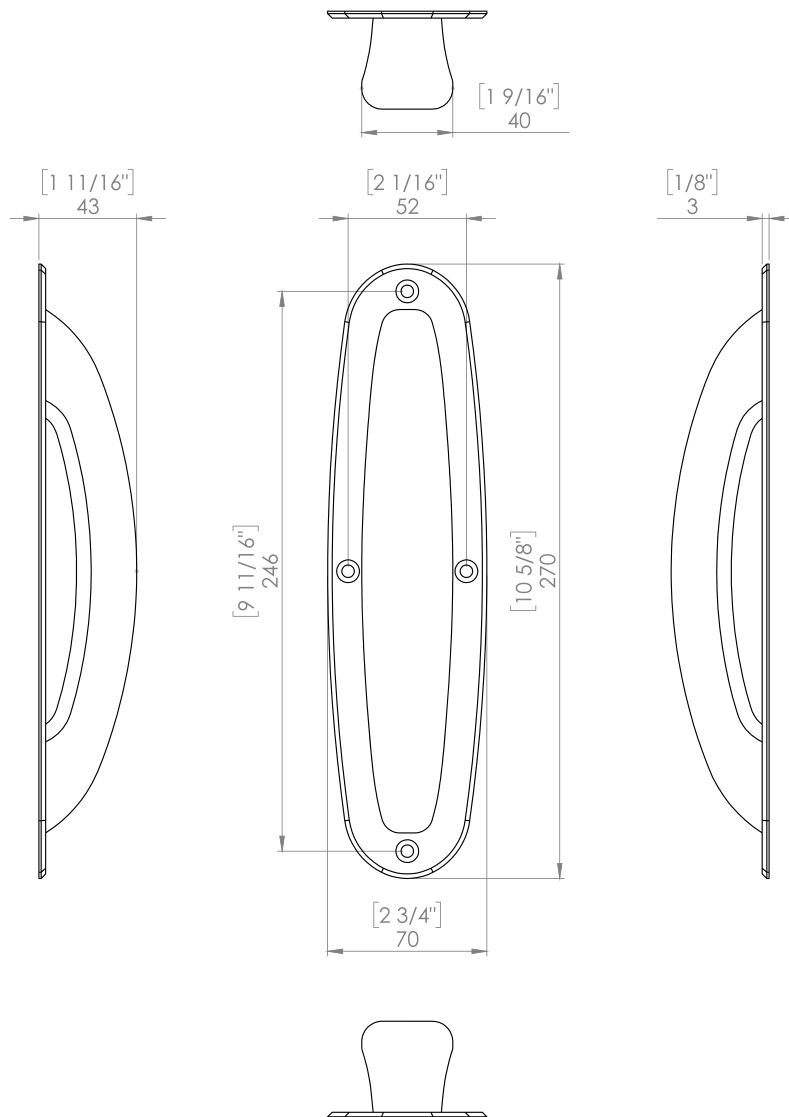

**Terms and conditions:**

To see our full terms and conditions, please visit: [kingswaygroupglobal.com/en-au/terms](https://kingswaygroupglobal.com/en-au/terms)