


Product datasheet

Kingsway
Group

KG10 Recessed Toilet Tissue Dispenser

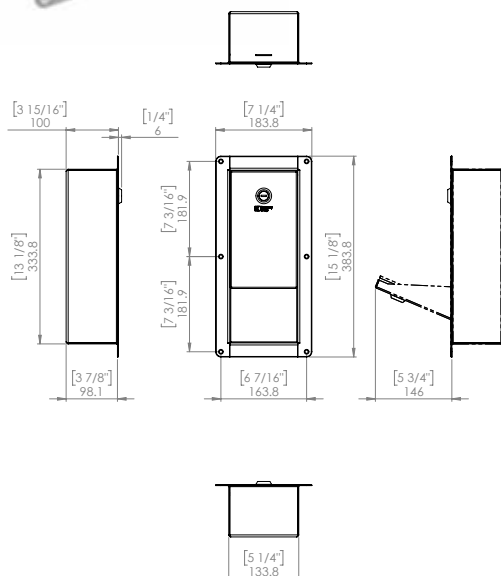

Anti-ligature Disclaimer

Anti-ligature Disclaimer The anti-ligature design characteristics of this product are not intended to replace or substitute the need for necessary supervision of those who may be at risk, or for other necessary protective measures to be taken in the specific circumstances of usage. Kingsway Group, Inc. does not offer any products for sale as being 'ligature-free' and will not be liable for any claims arising from ligature attachment on its products. It is the customer's responsibility to ensure that products purchased and installed are suitable for the environments they are installed in.

Stainless steel recessed toilet tissue dispenser that provides the ultimate solution for anti-ligature washrooms. Flush fitting and well styled it provides the perfect combination when creating non-institutional interiors.

Installation Description

- Mark out and remove the cut-out needed for the recess of the dispenser body.
- Place the dispenser in the cut-out and mark out for the fixing holes.
- Drill and plug the holes and secure the dispenser in place with the security fixings provided.
- We recommend that all washroom items are also sealed around all sides with anti-pick mastic.

Operation and Maintenance

Operation

To load the dispenser unlock the front door and load tissues on to the shelf.

Maintenance

Care should be taken to ensure that the lock remains functional and free from signs of damage.

Cleaning

Use only a damp cloth to clean the dispenser, where necessary a mild detergent can be used.

Guarantee

Five Year Guarantee*

*For faulty manufacture and not for damage

Specification

KG10 Recessed Toilet Tissue Dispenser