

Product datasheet

Kingsway
Group

KG171 Clinic Room Hatch with Vision Panel



The KG171 Clinic Room Hatch with Vision Panel is a high secure unit that is installed into doors to provide a secure serving solution with the added benefit of observation abilities. Manufactured to allow items to be passed out of a secure room removing the requirement for the door to be opened for communications or patient serving.

Installation Description

- Cut out the required aperture in the door to suit the unit
- Fix the inner part of the food hatch and make sure that it is level
- Fix the front fascia and ensure that all fixings are tight

Operation and Maintenance

Operation

To pass an object through the door, unlock the hatch from the staff side and open the hatch part into the open position. Pass the object or communicate through the hatch.

Maintenance

Light lubricant can be used on moving parts and periodic checks should be made to

Cleaning

To thoroughly clean turn the inside catches and remove the whole unit from the wall. Cleaning with a mild detergent and replace when dry. Avoid the use of caustic cleaners.


Guarantee

5 Year Guarantee*

*For faulty manufacture and not for damage

Specification

KG171 Anti-Ligature Secure Observation Door Hatch with Vision Panel - specify door thickness

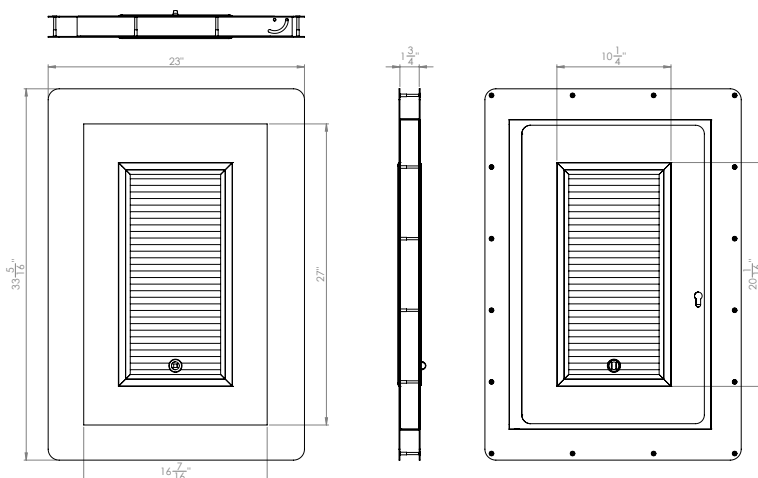

Anti-ligature Disclaimer

Anti-ligature Disclaimer The anti-ligature design characteristics of this product are not intended to replace or substitute the need for necessary supervision of those who may be at risk, or for other necessary protective measures to be taken in the specific circumstances of usage. Kingsway Group, Inc. does not offer any products for sale as being 'ligature-free' and will not be liable for any claims arising from ligature attachment on its products. It is the customer's responsibility to ensure that products purchased and installed are suitable for the environments they are installed in.