

PRODUCT DATASHEET

## KG40 Ergo Grip Pull Handle (on Backplate)

The KG40 Ergo Grip is a stylish ligature-resistant pull handle designed for use in behavioral health environments to minimize the risk of patient self-harm. The handle offers offers excellent grip and durability in challenging environments and features a large radiused finger plate with chamfered edges and countersunk fixing holes. Supplied with security fixings.



#### Terms and conditions:

To see our full terms and conditions, please visit: kingswaygroupglobal.com/en-us/terms

# Your Partner in Patient Safety

### Installation Description

- If a KG41 Ergo Grip Pull Handle (throughbolt fixed) is being fitted to the other side of the door, install that handle first before continuing
- Mark out the 4x fixing holes by placing the handle on the door, making sure the backplate is flat on the door
- Pilot the 4x fixing holes then fix the handle in place using the 4x countersunk security screws supplied

## Maintenance and Cleaning

#### **Maintenance**

Periodic checks should be made to ensure the handle is free from damage and any signs of tampering and that the fixings remain securely fastened.

#### Cleaning

Handles should be cleaned using a nonabrasive sanitizing agent. Abrasive cleaning cloth and agents should be avoided.

#### Guarantee

#### 3 Year Guarantee\*

\*For faulty manufacture and not for damage


#### **Specification**

KG40 ligature-resistant surface mounted Ergo Grip pull handle on backplate with security screws



PRODUCT DIAGRAM

# KG40 Ergo Grip Pull Handle (on Backplate)

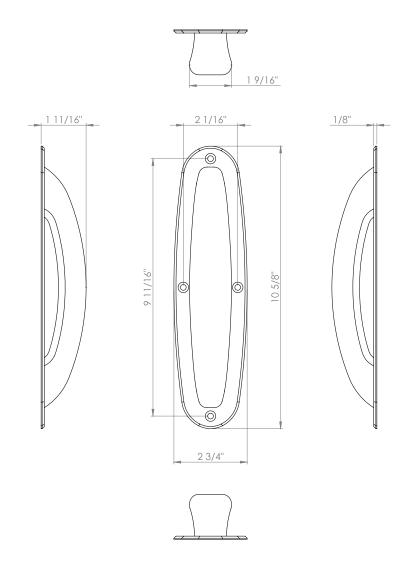

#### Terms and conditions:

To see our full terms and conditions, please visit: kingswaygroupglobal.com/en-us/terms