

## PRODUCT DATASHEET

# KG07 Manual Soap Dispenser

A stainless steel, surface-mounted liquid soap dispenser that provides a hygienic, safe, and durable solution to hand sanitisation in patient accessible washrooms. The manually operated unit features a shaped top and smooth edges for use in the most challenging environments. The dispenser utilises a refillable dispensing unit which can be removed to manage refills.

**Terms and conditions:**

To see our full terms and conditions, please visit:  
[kingswaygroupglobal.com/terms](https://kingswaygroupglobal.com/terms)

# Your Partner in Patient Safety

## Installation Description

- Mark out the location of the dispenser
- Drill and plug holes to a suitable depth
- Secure the dispenser to the wall using the security fixings provided

We recommend that you caulk around all sides with tamper proof security sealant.

## Operation and Maintenance

### Operation

To refill, unlock the unit and slide the inner cassette downwards. Remove the soap reservoir and fill with liquid soap. Put the soap reservoir back in place and raise the inner cassette. Lock the unit and ensure the cassette is secured before use.

### Maintenance

Care should be taken to ensure that the lock remains functional and free from signs of damage or tampering. When necessary, lubricate the lock with a dry graphite lubricant.

### Cleaning

Should be cleaned as part of regular schedule using mild (non-abrasive) detergents. Avoid acidic cleaners.

## Guarantee

### 5 Year Guarantee\*

\*For faulty manufacture and not for damage


### Specification

KG07 Liquid Soap Dispenser

This product requires liquid soap refills to be purchased separately. We recommend the Gojo 1847-04 5 litre container.

PRODUCT DIAGRAM

# KG07 Manual Soap Dispenser

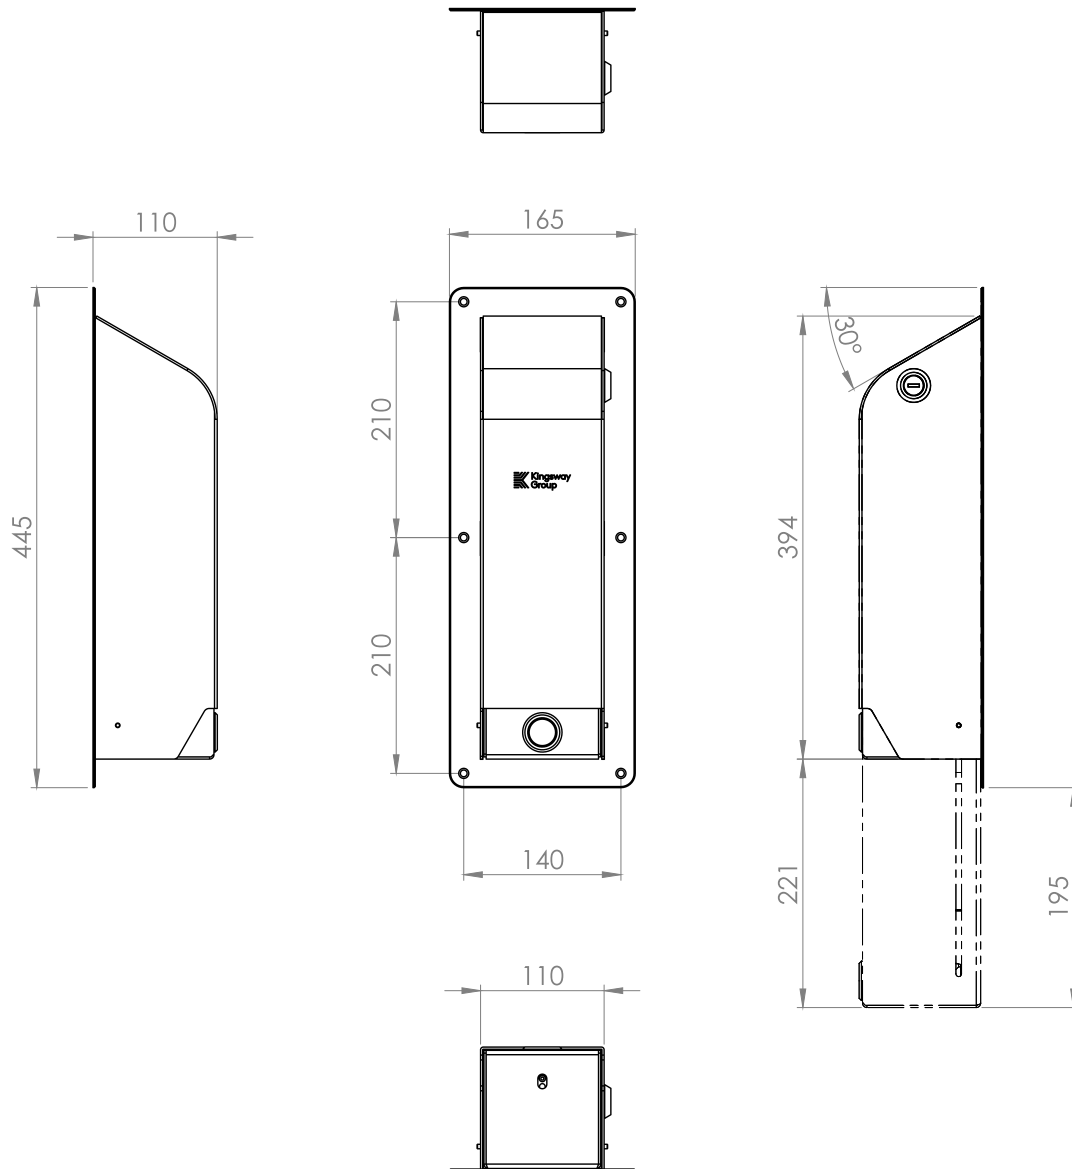

**Terms and conditions:**

To see our full terms and conditions, please visit: [kingswaygroupglobal.com/terms](https://kingswaygroupglobal.com/terms)