

PRODUCT DATASHEET

KG10 Recessed Toilet Tissue Dispenser

A stainless steel recessed toilet tissue dispenser that provides the ultimate solution for anti-ligature washrooms. Flush fitting and well styled, it delivers the perfect combination of safety and aesthetics when creating non-institutional interiors.

**Terms and conditions:**

To see our full terms and conditions, please visit:
kingswaygroupglobal.com/terms

Your Partner in Patient Safety

Installation Description

- Mark out and remove the cut-out needed for the recess of the dispenser body
- Place the dispenser in the cut-out and mark out for the fixing holes
- Drill and plug the holes and secure the dispenser in place with the security fixings provided

We recommend that you caulk around all sides with tamper proof security sealant.

Operation and Maintenance

Operation

To load the dispenser, unlock the unit and load toilet tissues on to the shelf. Once loaded, close the unit and lock to secure.

Maintenance

Care should be taken to ensure that the lock remains functional and free from signs of damage or tampering. When necessary, lubricate the lock with a dry graphite lubricant.

Cleaning

Should be cleaned as part of regular schedule using mild (non-abrasive) detergents. Avoid acidic cleaners.

Guarantee

5 Year Guarantee*


*For faulty manufacture and not for damage

Specification

KG10 Recessed Toilet Tissue Dispenser

PRODUCT DIAGRAM

KG10 Recessed Toilet Tissue Dispenser

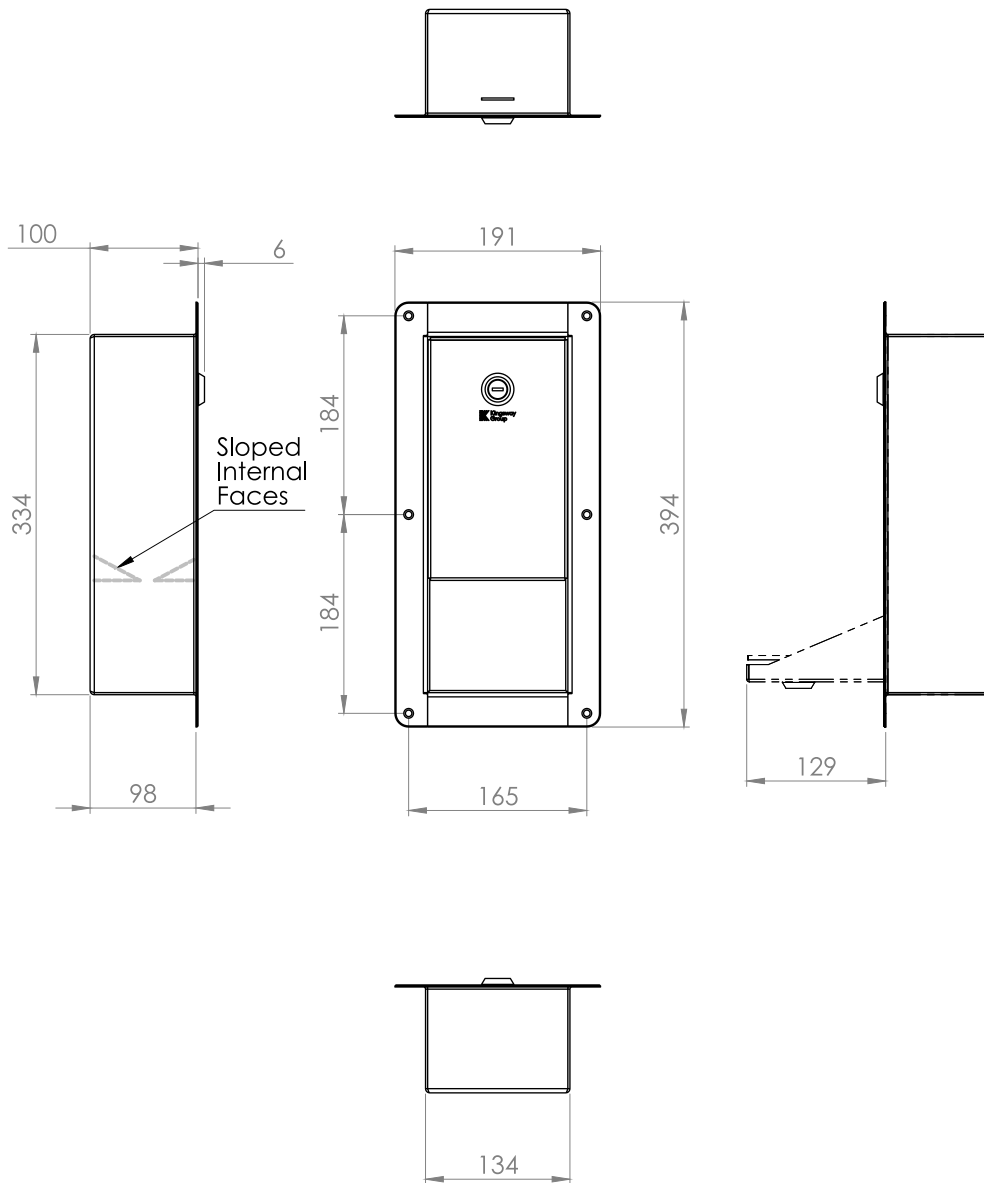

Terms and conditions:

To see our full terms and conditions, please visit: kingswaygroupglobal.com/terms