

PRODUCT DATASHEET

KG90 Lever Handles

A slimly designed, 45° bolt-fixed lever set suitable for those with impaired manual dexterity. The stainless steel handles offer great durability and provide an anti-ligature solution for latch door furniture with a smooth finish, neat design, and no visible fixings. The lever set features an 8mm spindle for use with sprung lockcases.



Terms and conditions:

To see our full terms and conditions, please visit:
kingswaygroupglobal.com/en-au/terms

Your Partner in Patient Safety

Installation Description

- Mark out the location of the mechanism and drill the three holes, one for the 8mm spindle and two for the fixings
- Once the lock case is installed, place the lever handles on the door with an 8mm spindle protruding and locating into the 8mm follower, making sure the holes through the door are wide enough to take the two weld studs for the M5 fixings
- Place the other handle on the other side of the door so that it locates on to the 8mm spindle. Make sure the spindle is locating properly in to the 8mm recess whilst not protruding so much that it hinds the function. This is fixed securely using the two M5 security bolts that pass through the lock into the weld studs on the other lever handle.

Maintenance and Cleaning

Maintenance

Periodic checks should be made to the fixings to ensure they remain tight and that they have not been tampered with.

Cleaning

The KG90 Lever Handles should be cleaned using a non-abrasive sanitising agent. Abrasive cleaning cloth and agents should be avoided.

Warranty

1 Year Manufacturer's Defect Warranty*


*For faulty manufacture and not for damage

Specification

KG90 Lever Handles

PRODUCT DIAGRAM

KG90 Lever Handles

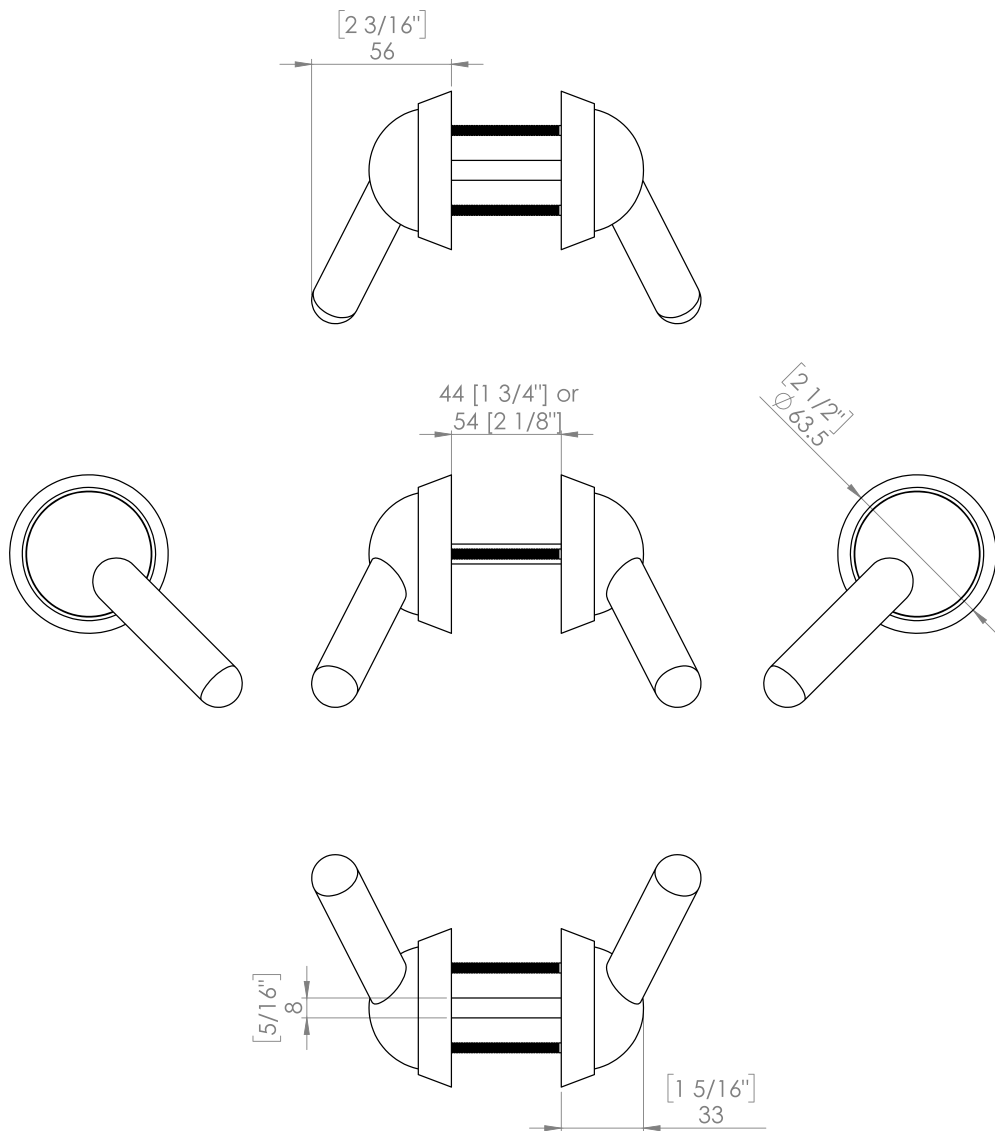

Terms and conditions:

To see our full terms and conditions, please visit: kingswaygroupglobal.com/en-au/terms