

PRODUCT DATASHEET

## KG105 Butt Hinges

The anti-ligature stainless steel butt hinges have a specially machined knuckle end that is chamfered to 45° to resist ligature attachment. Available in square edge (KG104) and radius edge (KG105) to suit varying installation preferences. Supplied with security pin torx fixings for maximum security.



### Terms and conditions:

To see our full terms and conditions, please visit:  
[kingswaygroupglobal.com/en-au/terms](https://kingswaygroupglobal.com/en-au/terms)

# Your Partner in Patient Safety

## Installation Description

- Mark out area on the door and install the hinges taking care to set the hinge in by the correct amount
- Offer up to the frame and mark the hinge positions
- Cut-out for the hinges and fix in place using the security fixings provided

## Operation and Maintenance

### Operation

KG105 Hinges have heavy duty ball bearings that allow the door to swing freely and easily, with specially shaped knuckle ends to resist ligature attachment.

### Maintenance

Where necessary, light oil should be used to assist the hinge action. Care should be taken to ensure the fixings remain tight and that they have not been tampered with.

### Cleaning

Cleaning of the hinges should be with a damp cloth. Cleaning agents should be avoided.

## Warranty

### 1 Year Manufacturer's Defect Warranty\*


\*For faulty manufacture and not for damage

### Specification

KG105 Radius Edge Butt Hinges

PRODUCT DIAGRAM

# KG105 Butt Hinges

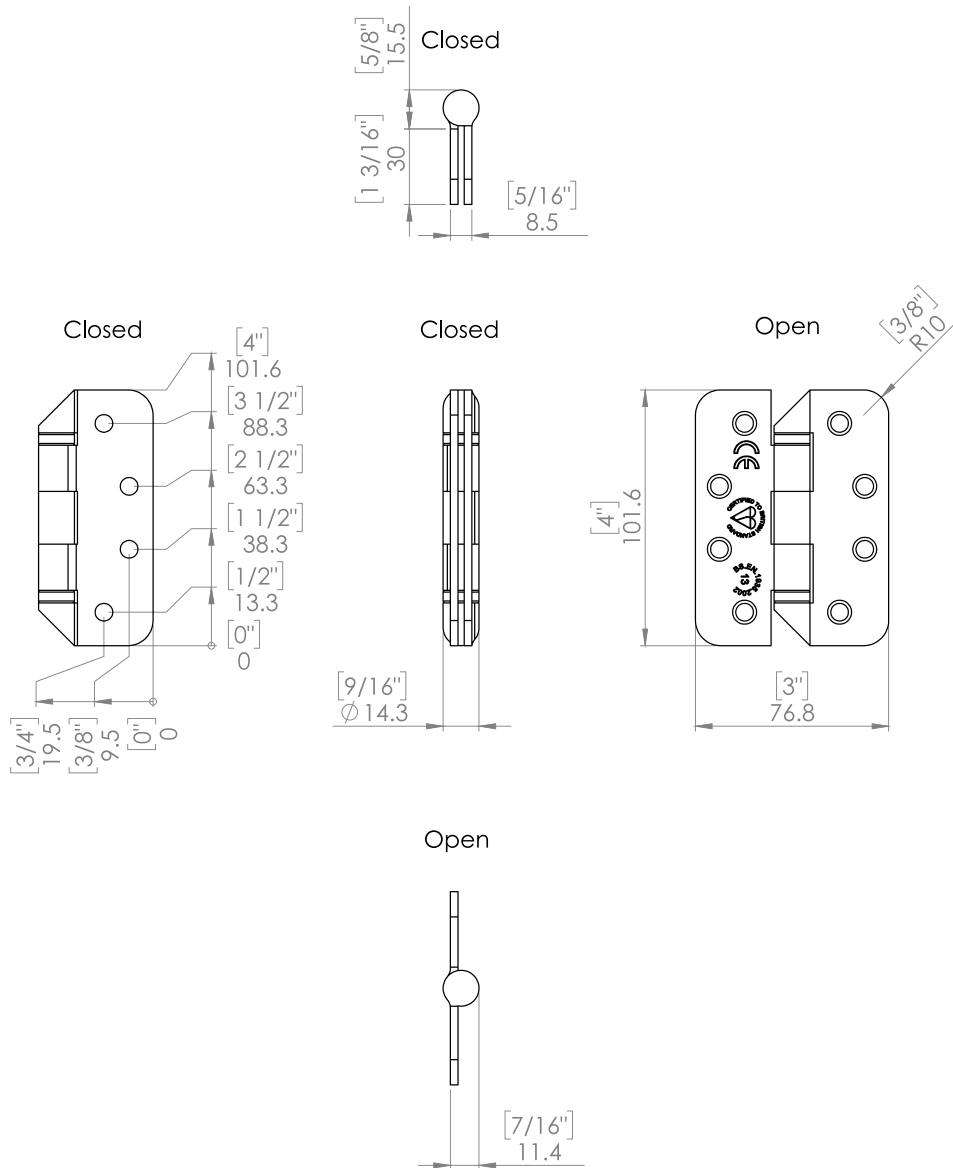

**Terms and conditions:**

To see our full terms and conditions, please visit: [kingswaygroupglobal.com/en-au/terms](https://kingswaygroupglobal.com/en-au/terms)