


Product datasheet

Kingsway
Group

KG1500 INDICATOR LOCKSET WITH SECONDARY OVERRIDE



Outside

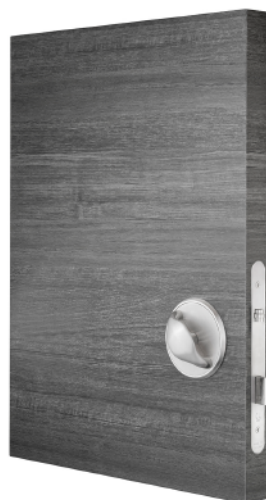

Inside

Anti-ligature Disclaimer

Anti-ligature Disclaimer The anti-ligature design characteristics of this product are not intended to replace or substitute the need for necessary supervision of those who may be at risk, or for other necessary protective measures to be taken in the specific circumstances of usage. Kingsway Group, Inc. does not offer any products for sale as being 'ligature-free' and will not be liable for any claims arising from ligature attachment on its products. It is the customer's responsibility to ensure that products purchased and installed are suitable for the environments they are installed in.

The KG1500 Indicator lockset is the ideal solution to washrooms and toilets in a patient accessible area.

Patient Function

Patient access from outside via anti-ligature pull handle and key cylinder if issued a key or door will be open on the roller bolt. Patient can always exit from the inside by unlocking the deadbolt with an anti-ligature thumb turn pull - when bolt is locked the indicator on the outside will show red.

Staff Function

Staff can always access from the outside using key even if thumb turn is held from the inside.

Staff can lock door from the outside using key.

If the patient has jammed the key-way the deadbolt can be released by using a Kingsway override key 8mm or Oval secure.

Components

KG1500 Bedroom Lockset comprises of:
1 x KG40 Erograsp Pull Handle
1 x KG86 Thumb Turn Pull with indicator and internal Override
1 x KG130 Roller Bolt Deadlock Lockcase
1 x KG176 Euro Escutcheon

Handle Options

The KG40 handle can be replaced with the following handles as per project requirement:
KG60 Classic Grip pull handle
KG70 Recessed pull handle

5 Year Guarantee*

*For faulty manufacture and not for damage

Specification

KG1500 Indicator Lockset With Secondary Override