




KG250/251 Grab Rail





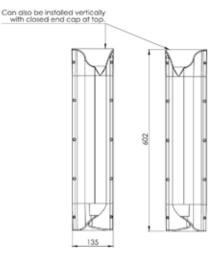

Anti-ligature Disclaimer

Anti-ligature Disclaimer The anti-ligature design characteristics of this product are not intended to replace or substitute the need for necessary supervision of those who may be at risk, or for other necessary protective measures to be taken in the specific circumstances of usage. Kingsway Group, Inc. does not offer any products for sale as being 'ligature-free' and will not be liable for any claims arising from ligature attachment on its products. It is the customer's responsibility to ensure that products purchased and installed are suitable for the environments they are installed in.

The WC Grab Rail is a 600mm handrail section with either a closed or open end cap. It is suitable for use either as a vertical rail beside a mirror, on the wall behind the WC, at 15° beside the WC or on the back of the door. Finished in a range of powder coating options and supplied with security fixings.

Installation description

- Place the grab rail on the wall and mark out the 10 fixing points.
- Drill holes for the 10 fixing points and insert suitable plugs.
- Fix the drop rail in place using the security screws provided.

Operation and Maintenance

Operation

To grip the handrail correctly, the fingers should curl round the bar with the thumb supporting from the outside.

Maintenance

Designed to be maintenance free having either a powder coated or anodised finish.

Cleaning

Avoid the use of caustic cleaners and where necessary only a light detergent should be used.

Guarantee

Five Year Guarantee*

*For faulty manufacture and not for damage

Specification

KG250 Anti-ligature DDA 600mm Left Hand Grab Rail. KG251 Anti-ligature DDA 600mm Right Hand Grab Rail.

This product is patented as per GB2505494