

## PRODUCT DATASHEET

# KG12 Recessed Washroom Shelf

A ligature-resistant, stainless steel recessed shelf for use in patient washrooms in behavioral health care environments. It features a self-draining base making it suitable for items such as soap.



### Terms and conditions:

To see our full terms and conditions, please visit:  
[kingswaygroupglobal.com/en-us/terms](https://kingswaygroupglobal.com/en-us/terms)

## Installation Description

- Mark out and remove the cut-out needed for the recess of the shelf
- Place the shelf in the cut-out and mark out the screw hole locations
- Drill holes for the provided screws and insert suitable anchors
- Secure the shelf to the wall using the security screws provided

We recommend that you apply pick-resistant security sealant around the perimeter of the unit.

## Operation and Maintenance

### Operation

Soap and other items can be placed on the washroom shelf and allowed to drain, providing a robust and safe solution.

### Maintenance

Care should be taken to ensure that all screws are secure and free of signs of tampering.

### Cleaning

Should be cleaned as part of regular schedule using mild (non-abrasive) detergents. Avoid acidic cleaners.

## Guarantee

### 3 Year Guarantee\*


\*For faulty manufacture and not for damage

### Specification

KG12 Recessed Washroom Shelf

PRODUCT DIAGRAM

# KG12 Recessed Washroom Shelf

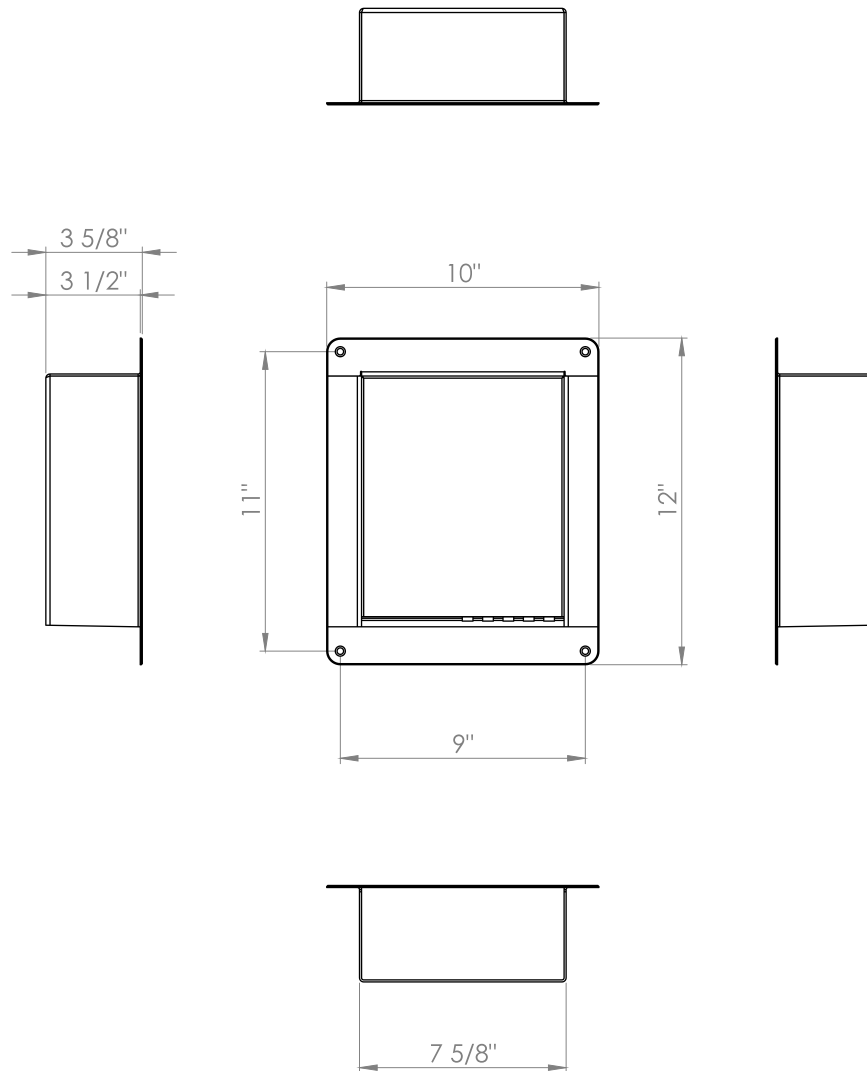

**Terms and conditions:**

To see our full terms and conditions, please visit: [kingswaygroupglobal.com/en-us/terms](https://kingswaygroupglobal.com/en-us/terms)